



## Fruit press painted iron

Manual for articles:

015.308.0 Fruit press painted iron 10L (type 20)

015.320.5 Fruit press painted iron 20L (type 25)

015.330.4 Fruit press painted iron 30L (type 30)

### INTRODUCTION

Thank you for having purchased this mechanical wine press.

This manual deals with the maintenance and operation of the machine.

reserves the right to make changes at any time without prior notice.

This manual should be considered an integral part of the machine and in such should be kept with the machine until it is disposed of.

### GUARANTEE

All claims must be made in writing within 8 days of delivery of the machine.

The purchaser can exercise his rights under guarantee only if the conditions regarding the presentation of the guarantee, as described in the contract of sale, have been respected.

At the moment of receipt check that the machine has not been damaged in any way

### SPECIFICATIONS

Article number	Type	Screw	Size cage (mm)	Capacity cage (liter)	Weight (kg)
015.308.0	20	28	200x350	11	25
015.320.5	25	28	250x400	20	30
015.330.4	30	35	300x450	28	45

### MANUAL

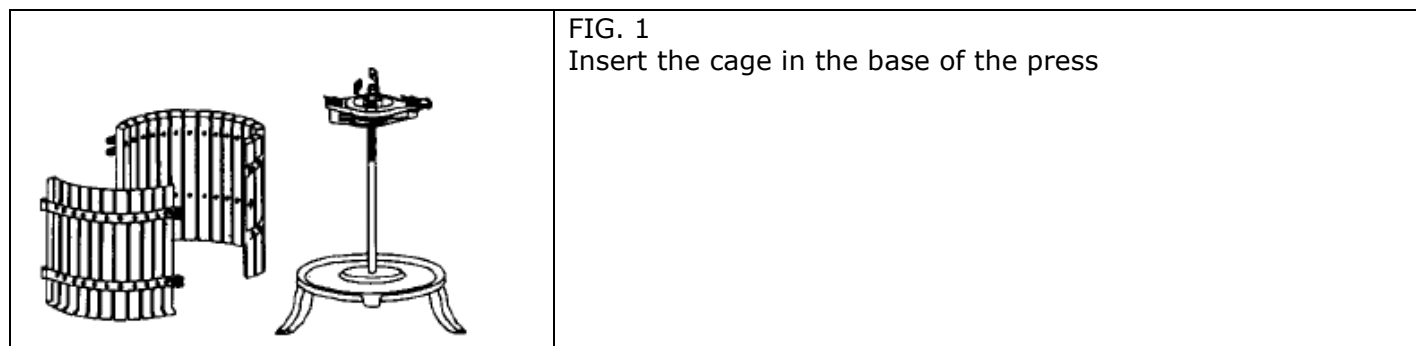


FIG. 1  
Insert the cage in the base of the press



	<p>FIG.2 Close the hooks on the cage and insert the ratchets in press position (see Fig.3).</p>
	<p>FIG.3 Position of the ratchets.</p>
	<p>FIG.4 Place the grape mark in the cage after having placed a recipient underneath the outlet spout on the base.</p>
	<p>FIG.5 Place the two semi-discs inside the cage and stack the blocks, as shown in the figure.</p>



	<p><b>FIG.6</b> Turn the lever horizontally to squeeze the product. (See Fig.)</p>
	<p><b>FIG.7</b> On finishing squeezing turn the ratchets back to the starting position.</p>
	<p><b>FIG.8</b> Remove the blocks and semi-discs. Open the cage by lifting the hooks and clean the entire unit before starting a new squeezing cycle.</p>

## PLACING OUT OF SERVICE

At the end of the season or before a long period of inactivity of the equipment, it is recommended to:

- 1) Carefully clean and dry the equipment. (IMPORTANT: the wooden parts must be completely dry)
- 2) Carefully check the equipment and replace any damaged and/or worn parts
- 3) Tighten all the nuts, bolts and screws
- 4) Carefully grease the equipment and then cover the entire unit (do not use a nylon cover) and place it in a dry environment.

## IMPORTANT

Careful carrying out the operations will result in perfect working order of the equipment and that it is ready for use the next time.

## Brouwland

Korspelsesteenweg 86 • B-3581 Beverlo - Belgium  
Tel. +32-(0)11-40.14.08 • Fax. +32-(0)11-34.73.59  
sales@brouwland.com • www.brouwland.com




## SPARE PARTS

Spare parts must be ordered at a local dealer.

Orders for spare parts must always contain the following information:

- 1) Type of press
- 2) Code number of the required part
- 3) Description and quantity of the required part
- 4) Means of shipment (to be agreed on with the customer)

All transport costs are to be borne by the receiver.

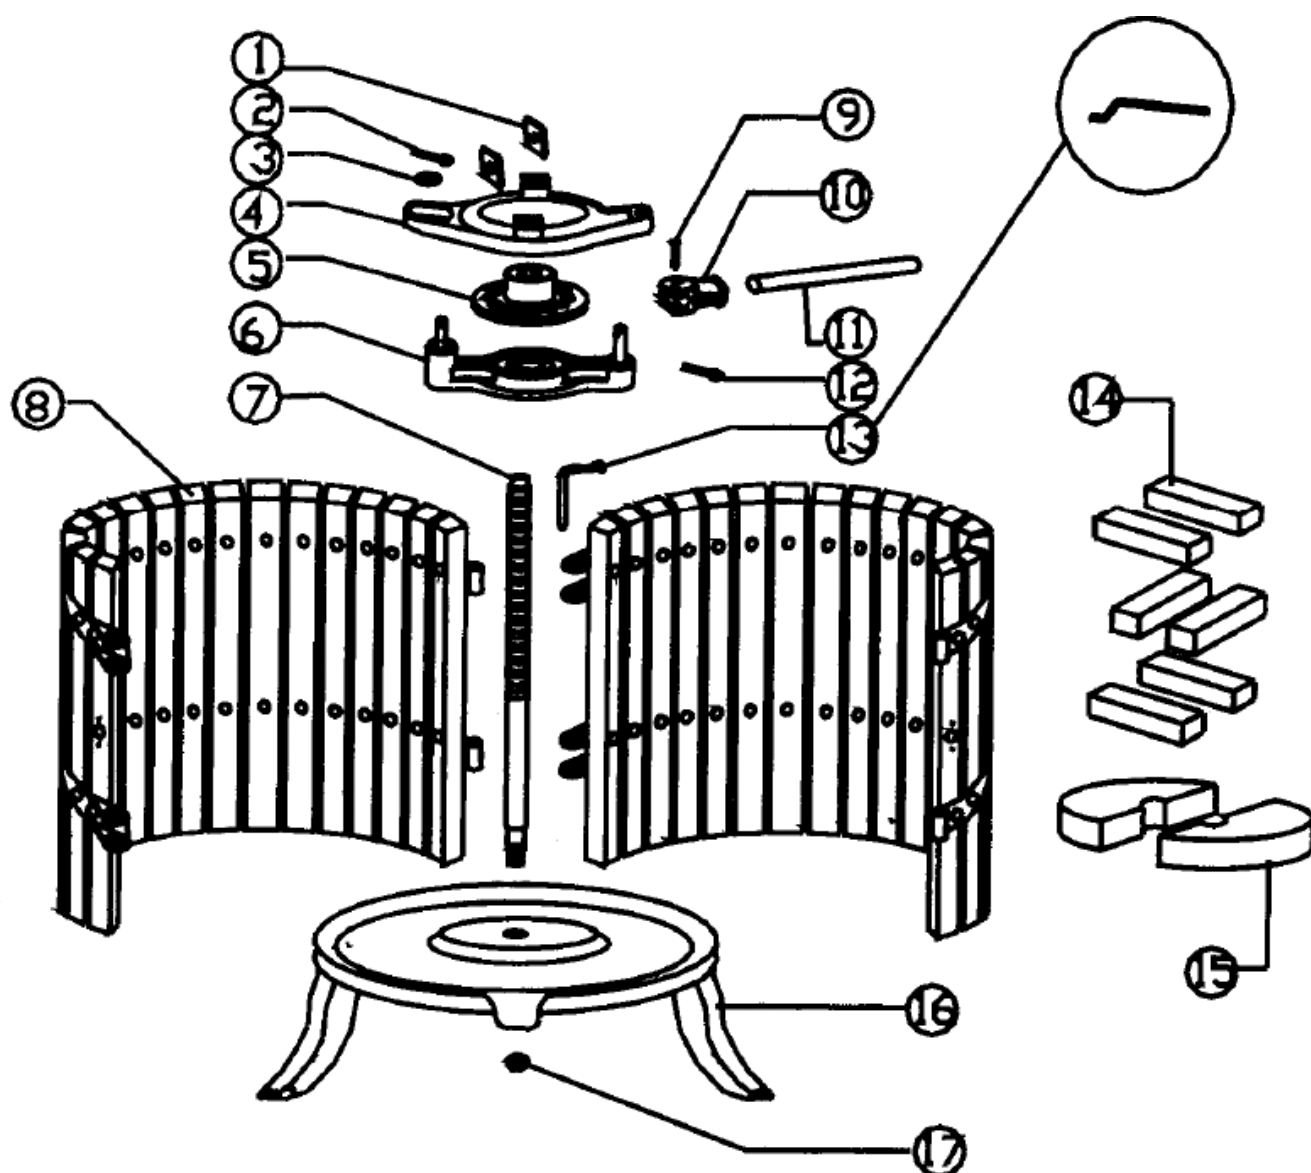



Number	Code	Quantity	Denomination
1	001	2	Ratchet
2	002	1	Split pin
3	003	1	Washer
4	004	1	Wedge support
5	005	1	Crown
6	006	1	Compressor
7	007	1	Threaded shaft
8	008	2	Cage
9	009	1	Lever support pin
10	010	1	Lever support
11	011	1	Lever
12	012	1	Split pin
13	013	1	Cage close hook
14	014	4	Set of blocks
15	015	6	Set of demi-discs
16	016	2	Base with legs
17	017	1	nut