




Gluing device small model



Lead the paper with the forefinger and then pull it out. The gluing mechanism has glued or moistened the label automatically.

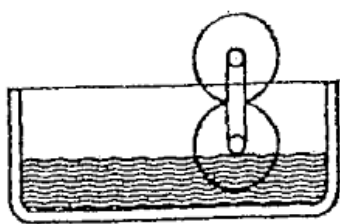

Preparing the gluing or moistening:

Remove the nickel-plated part of the cover. Then take away the glass container with the twin rollers and carefully fill it with liquid glue or water. As can be seen in the picture, only soak the lower roller to $\frac{1}{4}$ - $\frac{1}{2}$ into the glue or water.

Place back the container with the twin rolls and the cover.
With the thumbwheel, rotate the upper roller until there is a uniform fluid transfer.

And now everything is clear to DRAG!

Dispenser bowls for bulk labelling

By connecting this dispenser one can double the output. You do not need to pick each label individually.

Maintenance:

There is no special maintenance necessary if you use the machine daily. Dilute overnight thickened glue with water.

For prolonged work interruptions, store the glue in lockable bottle and rinse container including rollers

Attention:

Clean the reservoir exclusively with tap water. Each separate labeler has 2 functions: When filled with glue, it is an ideal gluing device; When filled with water, it serves as a moisturizer.

Information

Dimensions: 18 x 16,5/18 x 6 cm

Brouwland

Korspelsesteenweg 86 • B-3581 Beverlo - Belgium
Tel. +32-(0)11-40.14.08 • Fax. +32-(0)11-34.73.59
sales@brouwland.com • www.brouwland.com